

Neck setup informations

To get the best performance for your instrument, follow the instructions to set the neck correctly.

If you have problems with the string position, check the following:

Please keep the strings pressed on the 1st fret and the last fret.

On the 7th fret should be a distance of about **1,0 mm** to the fret / on Bassguitars **1,5-2,0mm**

Step 1: please loosen the screw on the headstock



Step 2: turn the key to the **left for more** curvature, to the **right for less** curvature



Please turn carefully and check the result in between.

Also read the document *"General instructions for the care of your instrument"*

Please note: Tele Relic Series guitars require you to remove the pickguard to adjust the neck !!!

Scheithauer Guitars wishes you a lot of fun with your instrument!

Scheithauer-Guitars – An der Unstrut 19 – 99996 Unstruttal/Germany

E-Mail: info@scheithauer-guitars.de

World Wide Web: www.scheithauer-guitars.de - www.facebook.com/ScheithauerGuitars